

第一步：

手机安装“硬件测试工具”，连接无线路由；

“硬件测试工具”的下载参见：

[“硬件测试工具”](#)

第二步：

将 uPlug 模块连接到网器设备底板上；

第三步：

打开“硬件测试工具”，完成注册，注意要先选择好环境，再进行注册；

The screenshot shows the login and registration screen for the uPlug V1.9.4(uSDK4.3.02) application. At the top is the u+ logo and the version number. Below that are two input fields: one for the phone number (with a person icon) and one for the password (with a key icon). Underneath these fields are three radio buttons for environment selection: '开发者环境' (Developer Environment), '生产环境' (Production Environment), and '自定义环境' (Custom Environment). The '生产环境' option is selected. Below the radio buttons is a large green '登录' (Login) button. At the bottom left is a red-bordered box containing the text '新用户注册' (New User Registration), and at the bottom right is a blue link for '忘记密码?' (Forgot Password?).

第四步：

操作网器设备使其进入 SoftAP 配置模式；

第五步：

登录“硬件测试工具”，注意选择好环境，在哪个环境注册的，就选哪个环境登录；




第六步：

点击“+”，选择“配置设备 SoftAP 配置”；




第七步：

点击“扫描”，搜索网器设备的 WIFI 热点；

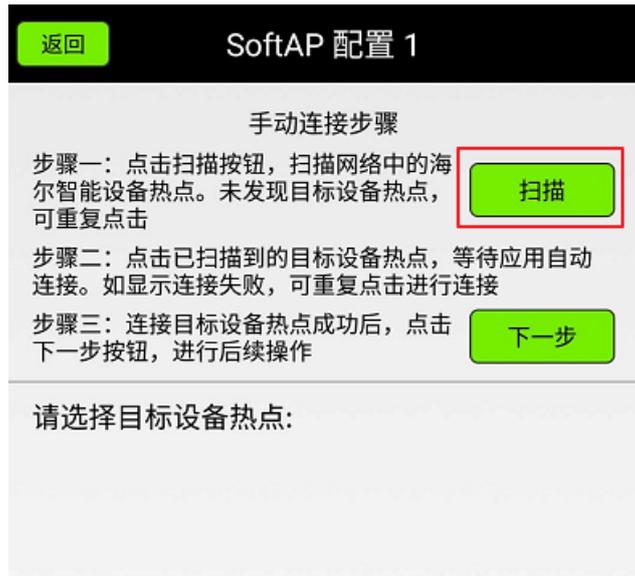


第八步：

点击搜索到的网器设备的 WIFI 热点，直接进行连接；

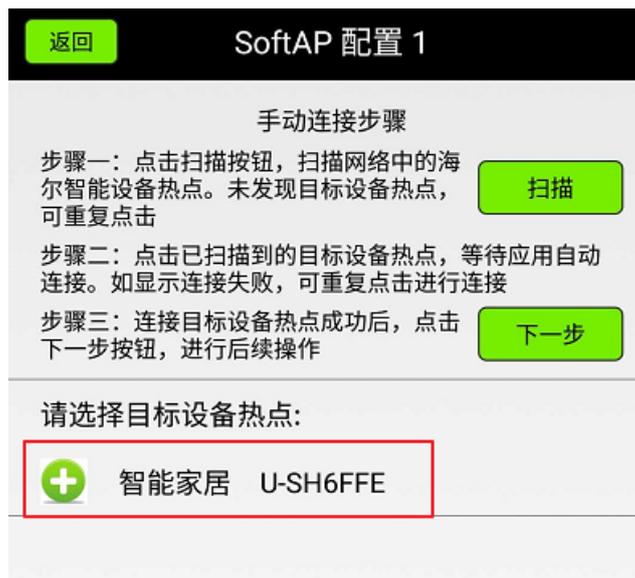

第九步：

连接设备热点成功后，点击“下一步”；

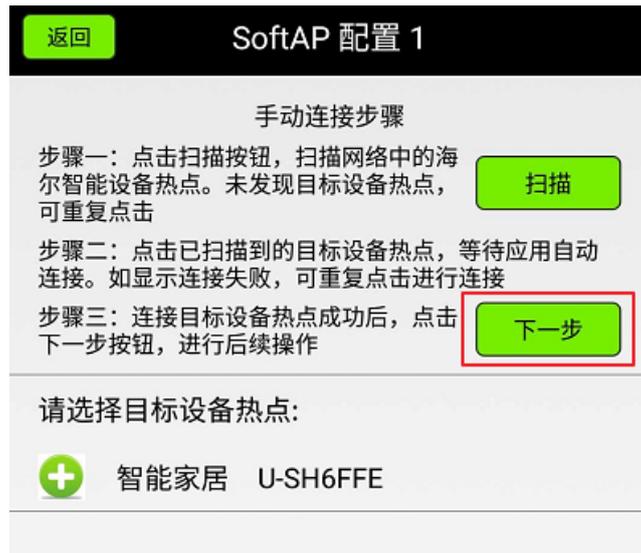

第十步：

点击要配置到的路由器名称；



第十一步：

输入路由器的密码，点击“确定”；



第十二步：

等待设备配置成功后，返回设备列表，就可以看到我们的设备了；



第十三步：

点击“+”，选择“绑定设备”；



第十四步：

选中要绑定的网器设备，点击“绑定”；



第十五步：

绑定成功后，点击该设该备进入状态控制页面，然后就可以查看设备的状态，并且对设备进行控制了。



单命令

组命令

报警

onOffStatus
开关机状态

开机

发送

onOffLight
开关灯状态

开灯

发送

setMode
设置模式

模式2

发送

setFloatValue
设置浮点数

3.40

发送

setIntValue
设置整形值

1

发送